


## Sort&Cope 2010.2


Sort&Cope application for Revit® Architecture and Revit® Structure provides a set of tools for managing a process of coping of Structural Framing Elements by predefined coping distance.

Supports metric and imperial unit systems  
Available in different languages

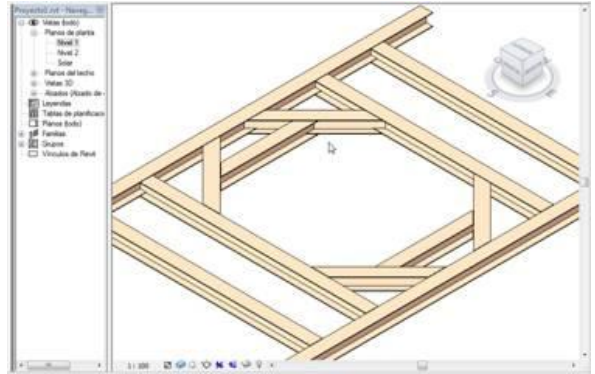

### Sort&Cope Features:

- **Apply coping along one beam I** - copes ends of all elements which are connected to the selected beam;
- **Apply coping along one beam II** - copes the beams with selected distance, which is intersecting or coming close with the chosen beam; *New feature in v.2010.2!*
- **Apply coping along one beam III** - copes the current distance of selected beam if it is intersecting or coming close with other beam/beams; *New feature in v.2010.2!*
- **Apply coping between two beams** - copes ends of all elements which are connected to selected two beams;
- **Apply coping for selected beams** - copes connected ends of selected beams;
- **Change coping distance** - changes coping distance of selected beams;
- **Remove coping** - removes all copings from selected beams.

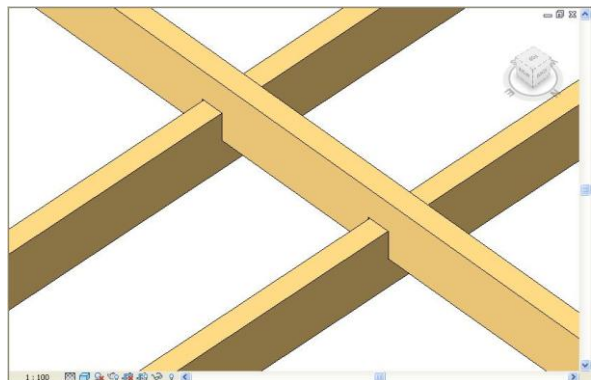

More information: [www.tools4revit.com](http://www.tools4revit.com)